



(From Newsletter of the San Diego Ship Modelers Guild, April, 1979.)


A Tip on Seizing:-----

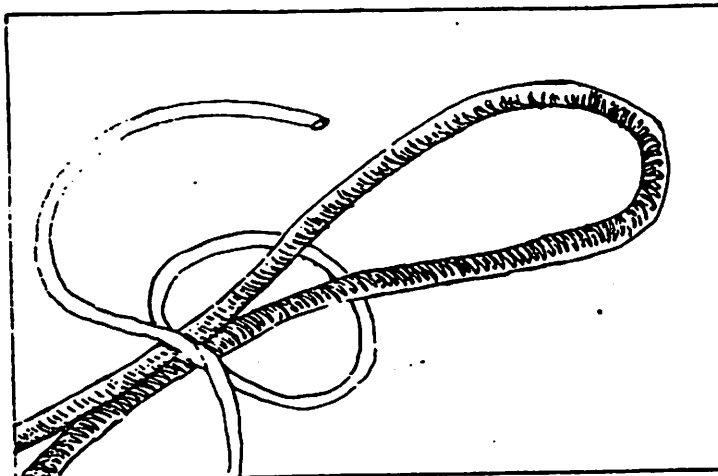


Step 1. Make a loop in the line to be siezed. Tie an overhand knot with the siezing line, leaving enough line to work with later.

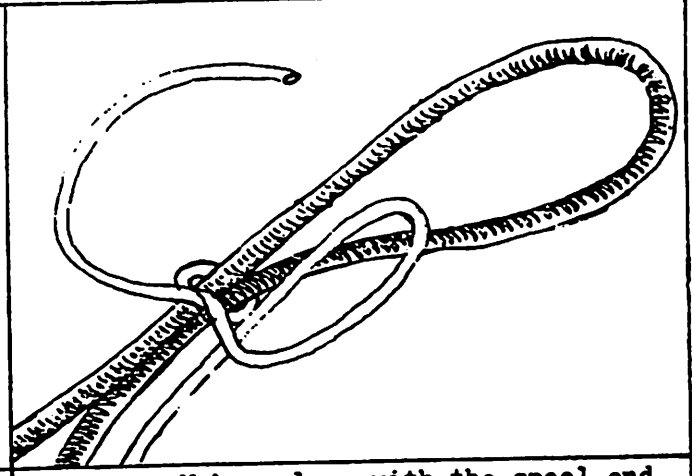


Step 2. Make a loop with the spool end laying the loop intersection on the intersection of the overhand knot.

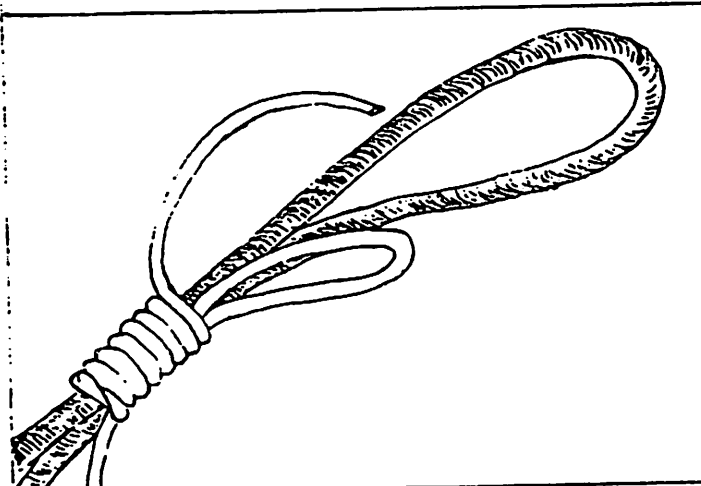


Step 3. With the working end, begin wrapping. Keep the coils close together. Keep count of the number of turns so later siezes are the same size.

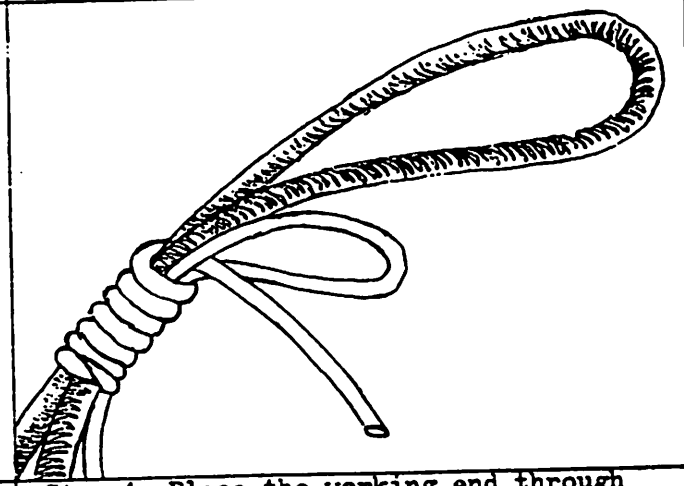

Step 4. Place the working end through the loop formed in step 2.

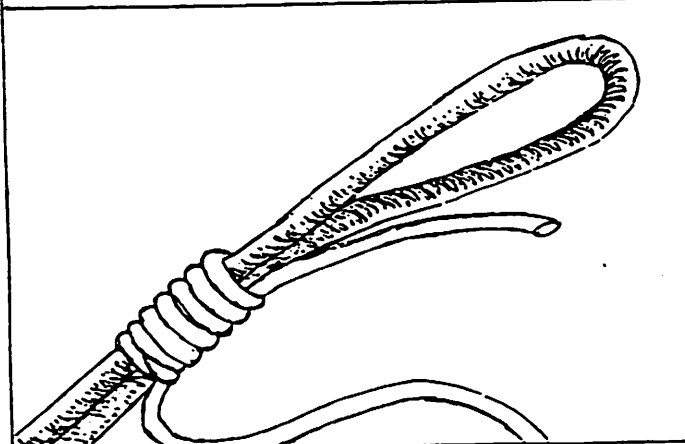

Step 5. Pull the spool end, pulling the working end under the coils. Pull both ends against one another to make the sieze tight.

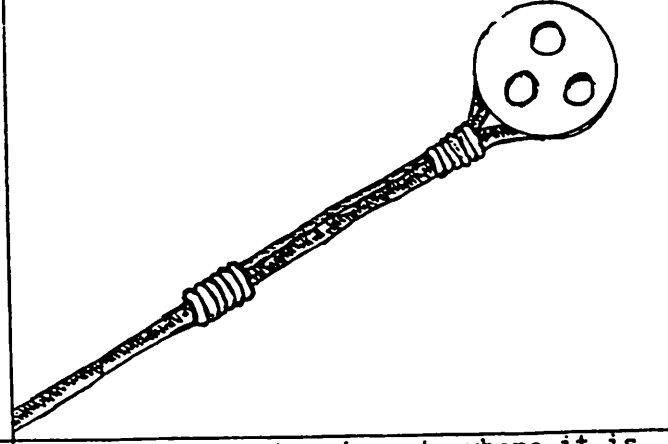

Step 6. Slide the sieze to where it is needed, insert Deadeye and pull the excess line through the sieze. until the Deadeye is captured. Cut excess line.