


# POUNCE WHEEL

( FOR RIVET EFFECT ON COPPER PLATES )

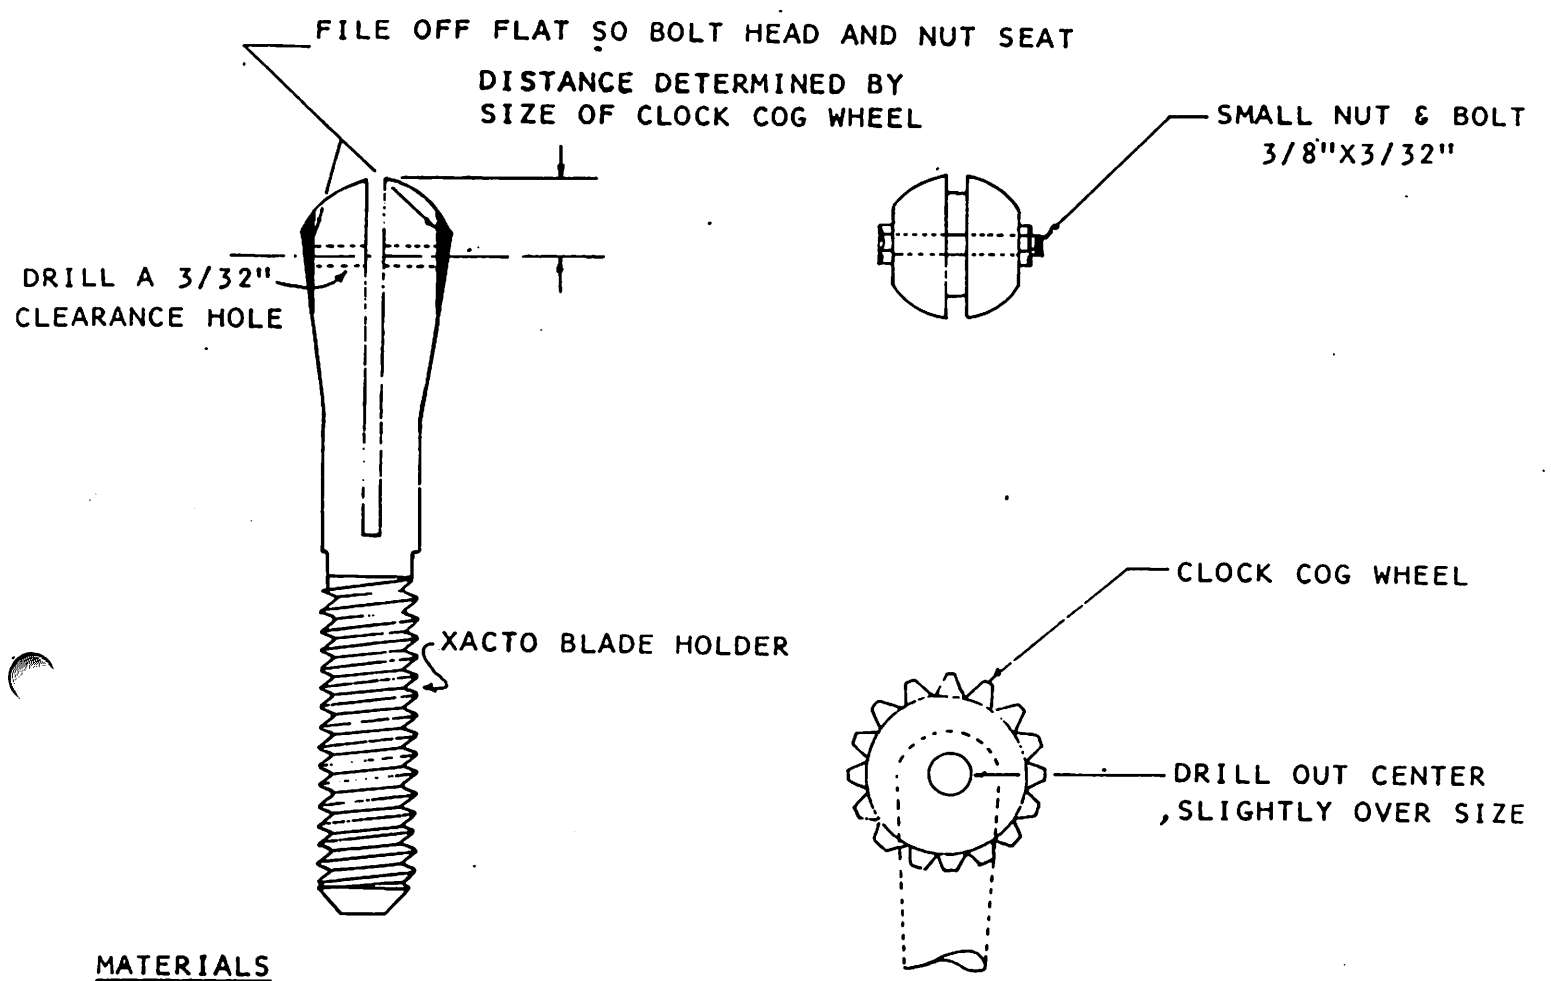

## MATERIALS

- 1-XACTO KNIFE (E.G. XACTO NO. 1 )
- 1-WATCH OR CLOCK COG WHEEL
- 1-3/8" X 3/32" NUT & BOLT

## NOTES

SEVERAL DIFFERENT SIZES OF COG WHEELS CAN BE USED DEPENDING ON THE SPACING NEEDED FOR RIVETS THE LARGEST COG THAT CAN BE USED IS 1" DIAMETER. AFTER WHEEL IS ATTACHED REPLACE IN HANDLE WITHOUT KNURLED COLLER